WTM000405 57114-27 rA.qxd 1/3/06 12:25 PM Page 1

Orbit® | Irrigation Products, Inc.

EASY PROGRAMMING

Watering on specific days of the week

Note: For "Watering Interval" or "Odd/Even" option, see owners manual

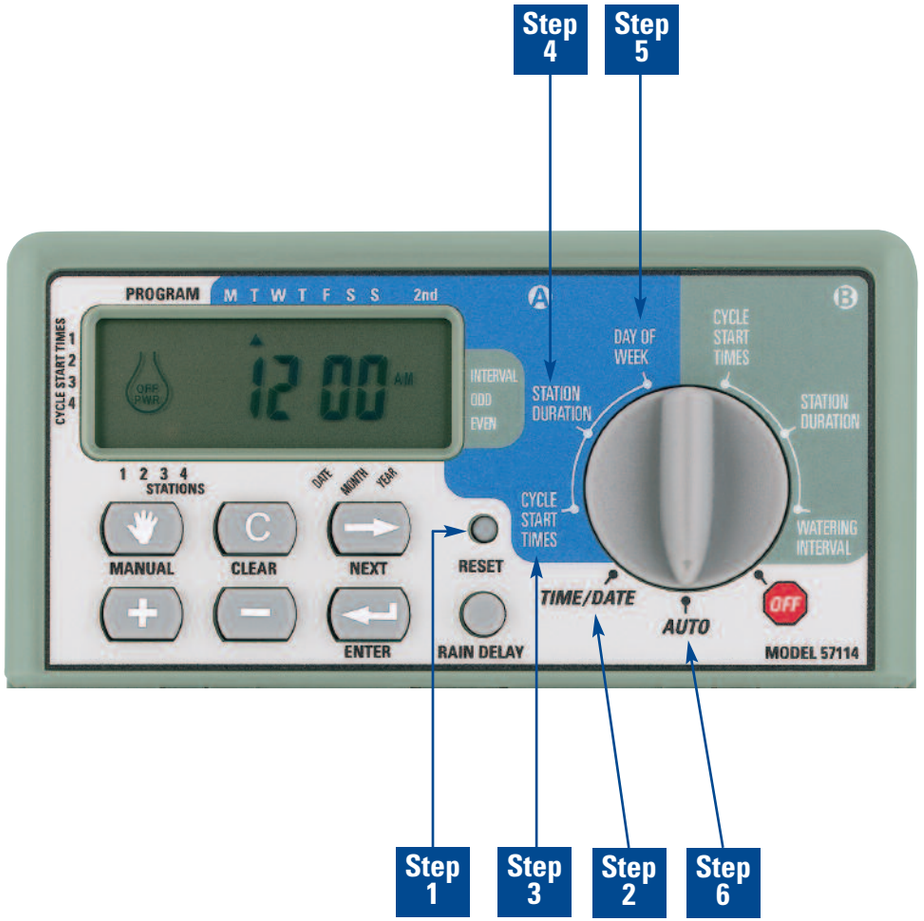

Step 1-Resetting the Timer
Insert 2 AA Batteries and/or connect the transformer to the timer.
Press the RESET button with a small round tipped object.

Step 2-Set Time/Date
Turn the dial to the **TIME/DATE** position.
Set the Current Time, Date, Month, & Year using the **+** or **–** buttons, followed by the ENTER button to save each setting.

Step 3-Set Cycle Start Times
Turn the dial to the **CYCLE START TIMES** position.
Enter one start time using the **+** or **–** buttons followed by the ENTER button. *Note: Entering additional start times – If you want your sprinklers to water the same area multiple times a day, please refer to your manual.*

Step 4-Set Station Duration
Turn the dial to the **STATION DURATION** position.
Enter a duration for each valve or station to be watered using the **+** or **–** buttons followed by the ENTER button to save your setting.

Step 5-Set Day of Week
Turn the dial to the **DAY OF WEEK** position
To select the day(s) of week to water, push the NEXT button until the arrow flashes under the desired day and press the ENTER button.

Congratulations, your timer is programmed!
To run your program, go to step 6

Step 6-Auto
Turn the rotary dial to the **AUTO** position to run the program.

WTM000405 57114-27 rA.qxd 1/3/06 12:25 PM Page 2

Orbit® | Irrigation Products, Inc.

FÁCIL DE PROGRAMAR

Riego en días específicos de la semana

Nota: Para la opción "Intervalo de riego" o "impar/par", consulte el manual del usuario

Paso 1-Resetear el Timer
Inserte 2 baterías AA y/o conecte el transformador al timer.
Pulse el Button RESET con un objeto pequeño de punta redondeada.

Paso 2-Hora/Fecha
Gire el dial a la posición **TIME/DATE**.
Fije la hora, fecha, mes y año actual usando las teclas **+** ó **-** y la tecla ENTER para guardar cada uno.

Paso 3-Horas de Comienzo del Ciclo
Gire el dial a la posición **CYCLE START TIMES** (horas de comienzo del ciclo).
Ingrese una hora de comienzo usando las teclas **+** ó **-** y la tecla ENTER.
Nota: Ingresar Horas adicionales de comienzo - Si usted desea que sus aspersores rieguen la misma zona muchas veces por día, por favor consulte su manual.

Paso 4-Duración de la Estación
Gire el dial a la posición **STATION DURATION**.
Enter a duration for each valve or station to be watered using the **+** or **–** keys followed by the ENTER key to save your setting.

Paso 5-Día de la Semana
Gire el dial a la posición **DAY OF WEEK**.
Seleccionar el (los) día(s) de la semana a regar. Pulse la tecla NEXT (siguiente) hasta que la flecha destelle en el día deseado y pulse la tecla ENTER.

¡Felicitaciones! Su timer está programado.
Para correr su programa, vaya al paso 6

Paso 6-Automático
Gire el dial rotatorio a la posición **AUTO** para correr el programa.

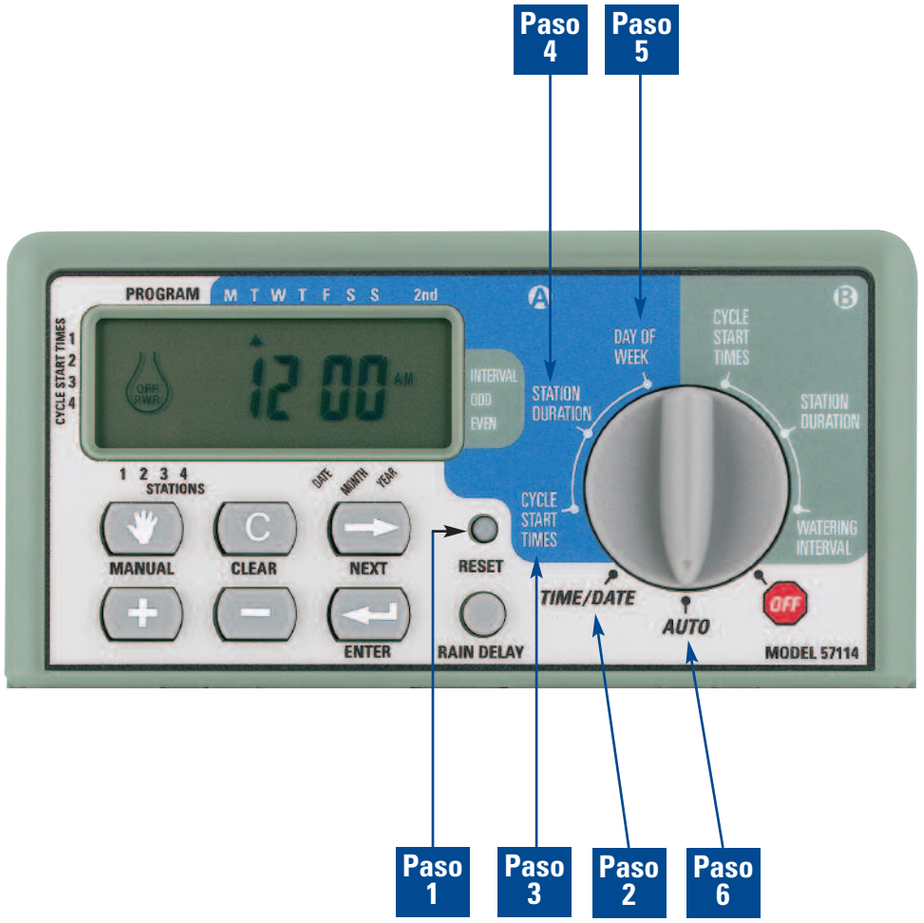

CLIENT APPROVAL

Please read and check the proof carefully, especially addresses and phone numbers. If you OK errors which are on this proof, Fluid Studio cannot be held responsible. All corrections should be clearly marked. Signature implies entire document is approved.

Client Signature Date

☐ OK As Is ☐ OK With Corrections

☐ Make Corrections & Supply New Proof

DES **SM** SPCK **XX** AD **XX**

JOB # **WTM000405** VERSION # **4**

DATE **12/23/05**

OF PAGES IN PROOF **2**

FLUID STUDIO

FILE: **WTM000405 57114-27 RA.QXD**

CLIENT: **ORBIT**

UPC: **046878**

DIMENSIONS W: **8.5"** H: **11"** D: **XX**

SPECIAL INSTRUCTIONS:

801-295-9820 • FAX 801-951-5815
1065 SOUTH 500 WEST LEVEL 2, BOUNTIFUL, UTAH 84010

COLORS